



1. 記号について

- スルーホール: デフォルトで接続
又は半田ジャンパ
- 通常のジャンパ

2. 注意書き

- 端子名“*”はアッパーバーを表します。
- 端子名“注”P70、P71はNチャンネルオープンドレイン出力です。

CN1	
PIN100	1
PIN1	2
PIN2	3
PIN3	4
PIN4	5
PIN5	6
PIN6	7
PIN7	8
PIN8	9
PIN10	10
PIN11	11
PIN12	12
PIN17	13
PIN18	14
PIN19	15
PIN20	16
PIN21	17
PIN22	18
PIN23	19
PIN24	20
PIN25	21
PIN26	22
PIN27	23
PIN28	24
PIN29	25
PIN30	26
PIN31	27
PIN32	28
PIN33	29
PIN34	30
PIN35	31
PIN36	32
PIN37	33
PIN38	34
NC	35
NC	36
	37
	38
	39
	40

P97/ADtrg*/RxD4/STxD4/SCL4
 P96/ANEX1/TxD4/SDA4/SRxD4
 P95/ANEX0/CLK4
 P94/DA1/TB4in/CTS4*/RTS4*/SS4*
 P93/DA0/TB3in/CTS3*/RTS3*/SS3*
 P92/TB2in/TxD3/SDA3/SRxD3/OUTC20/ISTxD2/IEout
 P91/TB1in/RxD3/SCL3/STxD3/ISRxD2/IEin
 P90/TB0in/CLK3
 BYTE
 P87/Xcin/Vcont
 P86/Xcout
 RESET*
 P85/NMI*
 P84/INT2*
 P83/INT1*/CANin
 P82/INT0*/CANout/OUTC32/ISRxD3
 P81/TA4in/U*/OUTC30/ISTxD3
 P80/TA4out/U/INPC02/ISRxD0/BE0in
 P77/TA3in/INPC01/OUTC01/ISCLK0/CANin
 P76/TA3out/INPC00/ISTxD0/BE0out/CANout
 P75/TA2in/W*/INPC12/OUTC12/ISRxD1/BE1in
 P74/TA2out/W/INPC11/OUTC11/ISCLK1
 P73/TA1in/V*/CTS2*/RTS2*/SS2*/OUTC10/ISTxD1/BE1out
 P72/TA1out/V/CLK2
 P71/TB5in/TA0in/RxD2/SCL2/STxD2/OUTC22/ISRxD2/IEin
 P70/TA0out/TxD2/SDA2/SRxD2/OUTC20/ISTxD2/IEout
 P67/TxD1/SDA1/SRxD1
 P66/RxD1/SCL1/STxD1
 P65/CLK1
 P64/CTS1*/RTS1*/SS1*/OUTC21/ISCLK2
 P63/TxD0/SDA0/SRxD0
 P62/RxD0/SCL0/STxD0
 P61/CLK0
 P60/CTS0*/RTS0*/SS0*

GND
 GND
 5V
 5V

CN2	
PIN81	1
PIN82	2
PIN83	3
PIN84	4
PIN85	5
PIN86	6
PIN87	7
PIN88	8
PIN89	9
PIN90	10
PIN91	11
PIN92	12
PIN93	13
PIN94	14
PIN95	15
PIN96	16
PIN97	17
PIN98	18
PIN99	19
NC	20

P07/AN07/D7
 P06/AN06/D6
 P05/AN05/D5
 P04/AN04/D4
 P03/AN03/D3
 P02/AN02/D2
 P01/AN01/D1
 P00/AN00/D0
 P107/AN7/KI3*
 P106/AN6/KI2*
 P105/AN5/KI1*
 P104/AN4/KI0*
 P103/AN3
 P102/AN2
 P101/AN1
 AVSS
 P100/AN0
 VREF
 AVCC

CN3	
PIN39	1
PIN40	2
PIN41	3
PIN42	4
PIN43	5
PIN44	6
PIN45	7
PIN46	8
PIN47	9
PIN48	10
PIN49	11
PIN50	12
PIN51	13
PIN52	14
PIN53	15
PIN54	16
PIN55	17
PIN56	18
PIN57	19
PIN58	20
PIN59	21
PIN60	22
PIN61	23
PIN63	24
PIN65	25
PIN66	26
PIN67	27
PIN68	28
PIN69	29
PIN70	30
PIN71	31
PIN72	32
PIN73	33
PIN74	34
PIN75	35
PIN76	36
PIN77	37
PIN78	38
PIN79	39
PIN80	40

P57/RDY*
 P56/ALE/RAS*
 P55/HOLD*
 P54/HLDA*/ALE
 P53/CLKout/BCLK/ALE
 P52/RD*/DW*
 P51/WRH*/BHE*/CASH*
 P50/WRL*/WR*/CASL*
 P47/CS0*/A23*
 P46/CS1*/A22
 P45/CS2*/A21
 P44/CS3*/A20(MA12)
 P43/A19(MA11)
 P42/A18(MA10)
 P41/A17(MA9)
 P40/A16(MA8)
 P37/A15(MA7)/(D15)
 P36/A14(MA6)/(D14)
 P35/A13(MA5)/(D13)
 P34/A12(MA4)/(D12)
 P33/A11(MA3)/(D11)
 P32/A10(MA2)/(D10)
 P31/A9(MA1)/(D9)
 P30/A8(MA0)/(D8)
 P27/A7(/D7)/AN27
 P26/A6(/D6)/AN26
 P25/A5(/D5)/AN25
 P24/A4(/D4)/AN24
 P23/A3(/D3)/AN23
 P22/A2(/D2)/AN22
 P21/A1(/D1)/AN21
 P20/A0(/D0)/AN20
 P17/D15/INT5*
 P16/D14/INT4*
 P15/D13/INT3*
 P14/D12
 P13/D11
 P12/D10
 P11/D9
 P10/D8

